

TEST & MEASUREMENT



CONCRETE SOLUTIONS GUIDE

FASTER, SAFER CONCRETE



SAVE TIME. SAVE MONEY. ENSURE QUALITY.

Increase productivity and reduce project costs with FLIR IntelliRock, IntelliCure, and EZ Cure products. These innovative new technologies give you the tools you need to build today's structures quickly, economically, and safely, while easily meeting tough specifications.

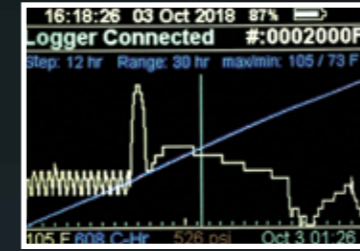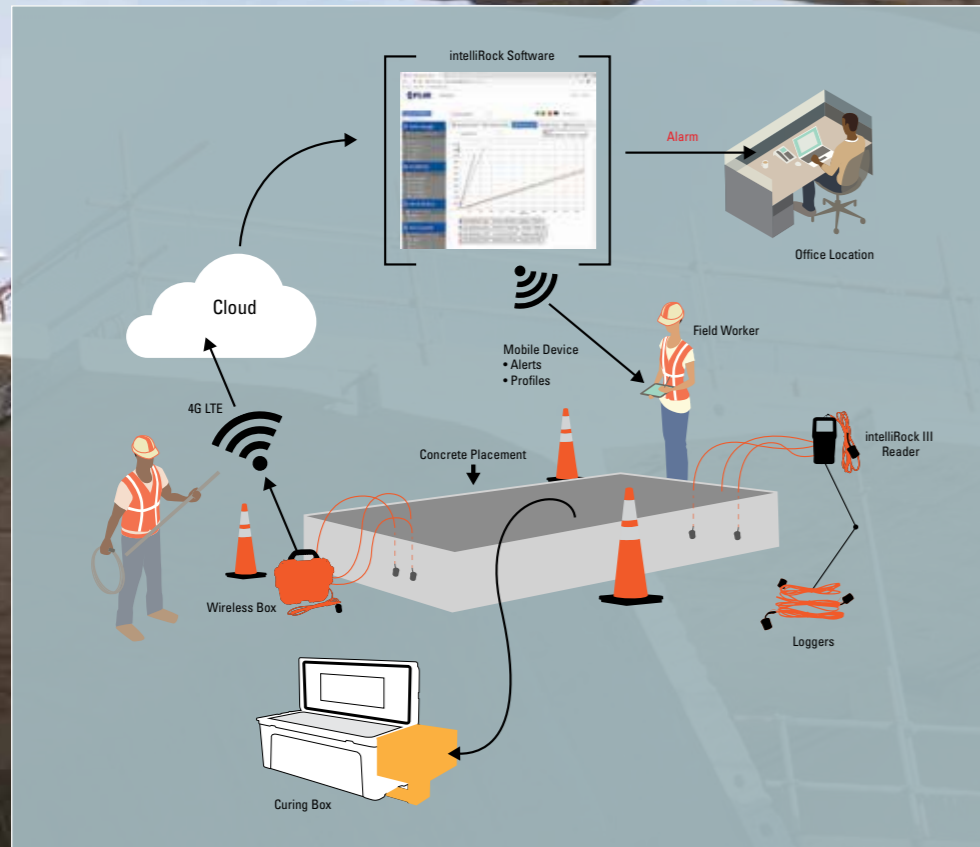


Create comprehensive graphs with temperature, strength, and max/min information

Unalterable, uninterrupted data integrity

View real-time data

Visually monitor the curing process with the built-in 160 x 120 FLIR Lepton thermal imager

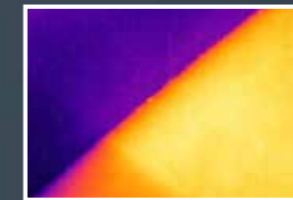

INTELLIROCK III CONCRETE STRENGTH AND TEMPERATURE PROFILING

COMPLETE PROJECTS AHEAD OF TIME, UNDER BUDGET, AND MEET SPECIFICATION REQUIREMENTS


IntelliRock III is the only system available to retain secure, uninterrupted, and unalterable data. It's packed with tools such as multiple mix design access, various alerts, and an infrared camera for temperature measurement and heat profiling. Report and review critical data from a computer or mobile device via secure cloud-based software.

KEY BENEFITS

- Build faster, strip forms earlier, and optimize post-tension work
- Reduce equipment rental, cement, and labor costs with maturity data
- Meet strict temperature monitoring requirements and avoid thermal issues
- Have peace of mind knowing that you can continuously monitor concrete performance offsite
- Identify surface temperature issues and monitor insulation performance

“This has saved me a great deal of time and effort. I am able to monitor mass concrete temperatures from my office without climbing forms during the winter months.”

-Victor Foti, Quality Control Manager, Middlesex Corporation

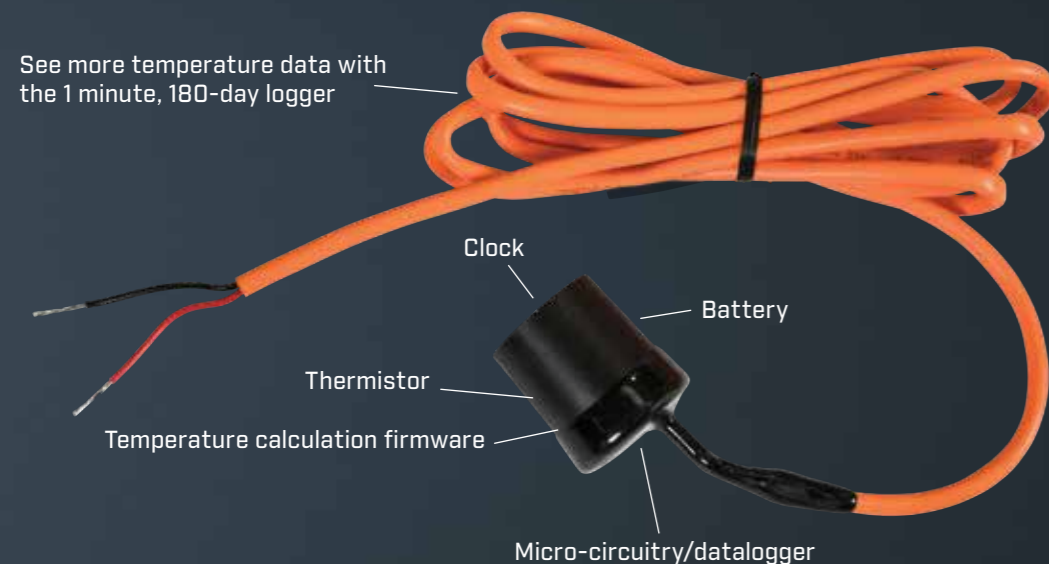

INTELLIROCK TEMPERATURE LOGGERS

IDEAL FOR COLD WEATHER AND MASS POURS


Measures and documents the temperature profiles and gradients of in-place concrete in real time.

KEY BENEFITS

- Measure and document temperature profiles and regulate thermal protection
- Monitor optimal temperature differentials using real-time temperature information
- Ensure adherence to temperature specifications by logging max/min temperatures for any construction application
- Expand construction calendar and provide effective management of fuel cost in cold weather
- Have peace of mind when offsite, with reassurance that temperatures meet required specifications
- See more data: the logger measures and stores temperature information every minute for 180 days

“Concrete maturity loggers are accurate, efficient, and easy to use. They helped us expedite our schedule by decreasing our cure time by showing sufficient strength earlier than our seven-day cylinder break.”

-Caleb M., Project Manager, AUI, Inc.

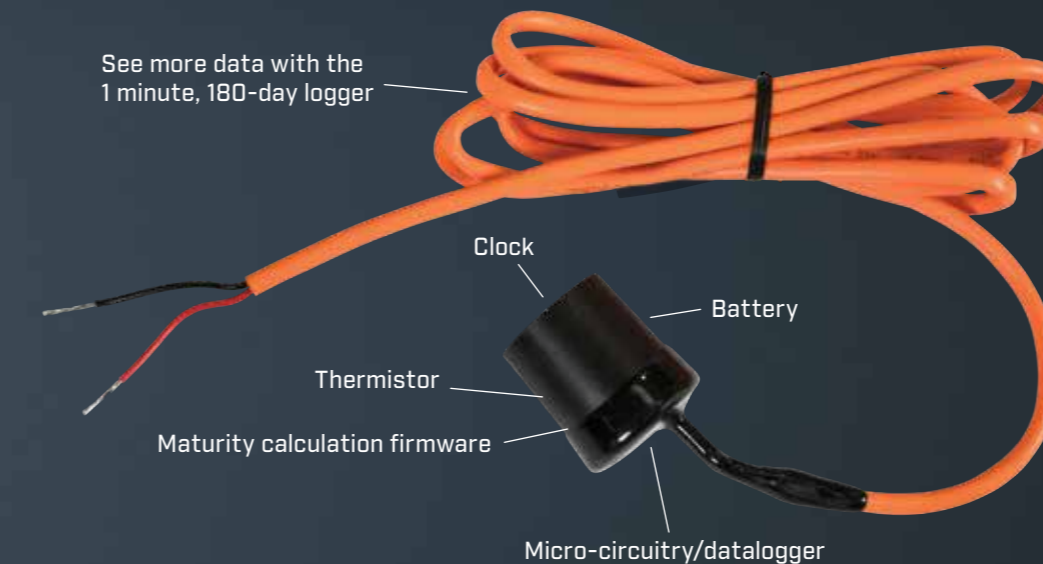

INTELLIROCK MATURITY LOGGERS

ACCELERATE WORKFLOW, ENSURE QUALITY

Analyze the time and temperature profile of in-place concrete to calculate its strength in real time with just the press of a button.

KEY BENEFITS

- Speed up concrete operations and extend the construction calendar in cooler weather
- Document early strength and temperature information
- Improve quality control with early validation of batching consistency
- Decrease labor and material costs
- See more data: the logger stores the current maturity value every minute for 180 days

INTELLIROCK WIRELESS CONCRETE CURING

SEND CRITICAL INFORMATION STRAIGHT TO YOUR DESKTOP

Connect IntelliRock maturity or temperature loggers to a wireless remote radio box to access data directly from your computer or mobile device via LTE 4G communication.

KEY BENEFITS

- Conveniently send data from IntelliRock loggers directly to the IntelliRock Cloud Software – straight from concrete placement
- Use where safety or accessibility is an issue
- Communicate with loggers from anywhere with LTE service

INTELLIROCK SOFTWARE

VIEW REAL-TIME DATA AND STRENGTHS ON A MOBILE DEVICE OR COMPUTER

Send logger data directly to this secure cloud-based software via cellular LTE 4G communication so you can share data and create reports and alerts easily.

KEY BENEFITS

- Access the latest strength and temperature data from any location
- Avoid quality issues by taking corrective action early using differential alerts
- Keep others informed by sending reports and alerts via email
- Adjust comparison points of multiple loggers that concrete hits at variable times by lining up the start times with the sliding-scale feature
- See more data: the IntelliRock loggers store temperature and the current maturity value every minute for 180 days



Use where safety or accessibility is an issue

Connect up to 8 dataloggers

Immediate data transfer to the cloud with 900 MHz wireless remote and LTE 4G cellular connectivity

Power on

Communicate with loggers up to 20 miles from the wireless base station





INTELLICURE CONCRETE CYLINDER CURING SYSTEM

THE INDUSTRY'S ULTIMATE CURING SOLUTION

Heats and cools to maintain a constant, adjustable curing temperature for both the initial cure and the full 28-day cycle.

KEY BENEFITS

- Eliminate temperature stratification with patented "Bubble Plume" technology that actively stirs the water
- Maintain a preset temperature for the entire curing cycle, as intellicure automatically heats or cools to ensure a consistent curing environment
- Trust in the curing system accuracy, which is certified accurate to $\pm 1^{\circ}\text{F}$ using a NIST traceable standard
- Protect your investment and ensure safe operation with the minimum-fill float switch
- Available in multiple sizes: mini, standard, and mega



INTELLICURE MATCH CONCRETE CYLINDER CURING SYSTEM

NEXT-GENERATION CONCRETE CYLINDER CURING

Heats and cools to maintain a constant, adjustable curing temperature for both the initial cure and the full 28-day cycle.

KEY BENEFITS

- Build faster with accurate apples-to-apples destructive samples
- Eliminate mix design headaches – no calibration curve necessary
- Get immediate PSI information for critical placement locations
- Verify the accuracy of maturity values by validating with match-cured specimens

“The EZ Cure box provides proper initial cylinder curing, which eliminates the argument of improper curing when low strength results occur.”

-Paul Nordlund, Inspector, CTC-GeoTek



EZ CURE II THERMOSTATIC CONTROLLED CURING BOX

IDEAL FOR THE FIRST 24 TO 48 HOURS OF CURING

A simple and economical field-curing solution that heats and cools as needed to maintain a constant 22.8°C (73°F) curing environment. Meets ASTM C31 curing requirements for job sites on a tight budget.

KEY BENEFITS

- Meet specifications by maintaining a stable 16 to 27°C (60 to 80°F) curing environment
- Easily access samples and maximize capacity with the included cylinder rack – holds 24 (6 x 12) or 52 (4 x 8) cylinders
- Reduce temperature stratification with three built-in fans for circulation
- Move the box easily via forklift using the built-in fork channels

GENERAL LOGGER		intelliRock III	
Operating Temperature		-20° to 99°C (4° to 210.2°F)	
Max Storage Time & Temperature		85°C (185°F) for 5 years	
Max Temperature Measurement Range		-20° to 125°C (4° to 257°F) (unwarranted outside of "operating temperature" range)	
Temperature Accuracy		-20° to 80°C (4° to 176°F), ±2°C, 80° to 99°C (176° to 210.2°F)	
Temperature Resolution		1°C (1.8°F)	
Time Accuracy		1 minute per month	
Temperature Measurement Rate		1 minute (resolution for min/max)	
Maturity Integration Period		1 minute	
DATA LOGGING			
Time		Yes	
Temperature		Yes	
Maturity		Yes	
Events		6+ max and min temperature	
Notes		8+ job site name and logger location	
LOGGER MODEL-SPECIFIC INFO			
Type of Logger		Temperature Only or Maturity	
Available Cable Lengths		4, 8, 15, 30, 50, or 100 ft	
INTELLIROCK III READER			
General Reader Operating Temperature Only or Maturity		-5° to 50°C (23° to 122°F)	
Time Accuracy		1 minute per month	
Logger Data Storage		999 logger downloads	
Calibration Curves		Holds 5 calibration curves for strength conversions	
PC Interface		USB and Bluetooth®	
Camera		160 x 120 thermal camera	

TECHNICAL SPECIFICATIONS

MODEL	EZ Cure II	intelliCure Mini	intelliCure Standard	intelliCure Mega	intelliCure Match
Cylinder Capacity	26- 15.2 x 30.5 cm (6 x 12 in) cylinders 79- 10.2 x 20.3 cm (4 x 8 in) cylinders	12- 15.2 x 30.5 cm (6 x 12 in) cylinders 27- 10.2 x 20.3 cm (4 x 8 in) cylinders	16- 15.2 x 30.5 cm (6 x 12 in) cylinders 40- 10.2 x 20.3 cm (4 x 8 in) cylinders	24- 15.2 x 30.5 cm (6 x 12 in) cylinders 104- 10.2 x 20.3 cm (4 x 8 in) cylinders	12 to 24- 15.2 x 30.5 cm (6 x 12 in) cylinders or 27 to 104- 10.2 x 20.3 cm (4 x 8 in) cylinders
Exterior Dimensions (L x W x H)	155 x 76.2 x 89 cm (61 x 30 x 35 in)	157.5 x 50.8 x 53.3 cm (62 x 20 x 21 in)	182.9 x 61 x 55.9 cm (72 x 24 x 22 in)	203.2 x 61 x 61 cm (80 x 24 x 24 in)	157.5 x 50.8 x 53.3 cm (62 x 20 x 21 in) 182.9 x 61 x 55.9 cm (72 x 24 x 22 in) 203.2 x 61 x 61 cm (80 x 24 x 24 in)
Interior Dimensions	127 x 55.9 x 63.5 cm (50 x 22 x 25 in)	99.1 x 35.6 x 38.1 cm (39 x 14 x 15 in)	124.5 x 43.2 x 38.1 cm (49 x 17 x 15 in)	144.8 x 48.3 x 43.2 cm (57 x 19 x 17 in)	99.1 x 35.6 x 38.1 cm (39 x 14 x 15 in) 124.5 x 43.2 x 38.1 cm (49 x 17 x 15 in) 144.8 x 48.3 x 43.2 cm (57 x 19 x 17 in)
Weight	106.6 kg (235 lb)	54.4 kg (120 lb)	61.2 kg (135 lb)	68 kg (150 lb)	56.7 to 70.3 kg (125 to 155 lb)
Power	110 V / 60 Hz, dedicated 15 A circuit	120 V / 60 Hz, dedicated 20 A circuit	120 V / 60 Hz, dedicated 20 A circuit	120 V / 60 Hz, dedicated 20 A circuit	120 V / 60 Hz, dedicated 30 A circuit



LEARN MORE ABOUT FLIR CONCRETE SOLUTIONS AT WWW.FLIR.COM/CONCRETE

FLIR *intelliRock*™

OKLAHOMA

FLIR Systems, Inc.
712 Eastgate Street
Stillwater, OK 74074
Tel 1.866.636.4487
Fax 1.866.277.8369
www.flir.com/concrete

PORTLAND

Corporate Headquarters
FLIR Systems, Inc.
27700 SW Parkway Ave.
Wilsonville, OR 97070
PH: +1 866.477.3687

NASHUA

FLIR Systems, Inc.
9 Townsend West
Nashua, NH 03063
PH: +1 866.477.3687

CANADA

FLIR Systems, Ltd.
920 Sheldon Court
Burlington, ON L7L 5K6
Canada
PH: +1 800.613.0507

LATIN AMERICA

FLIR Systems Brasil
Av. Antonio Bardella,
320 Sorocaba,
SP 18085-852
Brasil
PH: +55 15 3238 7080

CHINA

FLIR Systems Co., Ltd
Rm 1613-16, Tower II
Grand Central Plaza 1
38 Shatin Rural
Committee Rd.
Shatin, New Territories
Hong Kong
PH: +852 2792 8955

BELGIUM

FLIR Systems
Luxemburgstraat 2
2321 Meer
Belgium
PH: +32 (0) 3665 5100

UNITED KINGDOM

FLIR Systems UK
2 Kings Hill Ave., Kings Hill
West Malling, Kent
ME19 4AQ
United Kingdom
PH +44 (0)1732 220 011

www.flir.com
NASDAQ: FLIR

Equipment described herein may require US Government authorization for export purposes. Diversion contrary to US law is prohibited. Imagery for illustration purposes only. Specifications are subject to change without notice. ©2018 FLIR Systems, Inc. All rights reserved. (10/10) 18-1392 INS



The World's **Sixth Sense**®